

How to cut out and set a point load




Measure and mark the area that needs to be cut out.




Cut the marked section out from the CLEVA POD®.



The point load area exposed in the CLEVA POD®.

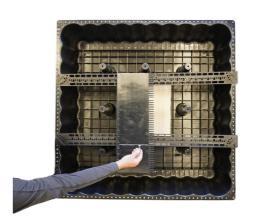

Measure and cut the CLEVA COMB™s to cover the exposed faces of the CLEVA POD®.

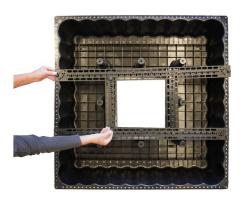

Push the CLEVA COMB™ firmly down into the grid securing the CLEVA COMB™ teeth into the CLEVA POD® structural grid and connect into the pre-drilled base flange using the CLEVA PLUG™s.



Installation Guide