




Measure and mark the angle and length of the POD that needs to be cut to accommodate an angle.



Cut the marked section out from the CLEVA POD®



HANDY TIP:
Two CLEVA COMB™s can be joined together using the CLEVA PLUG™s to bridge the full diagonal cut of a CLEVA POD®

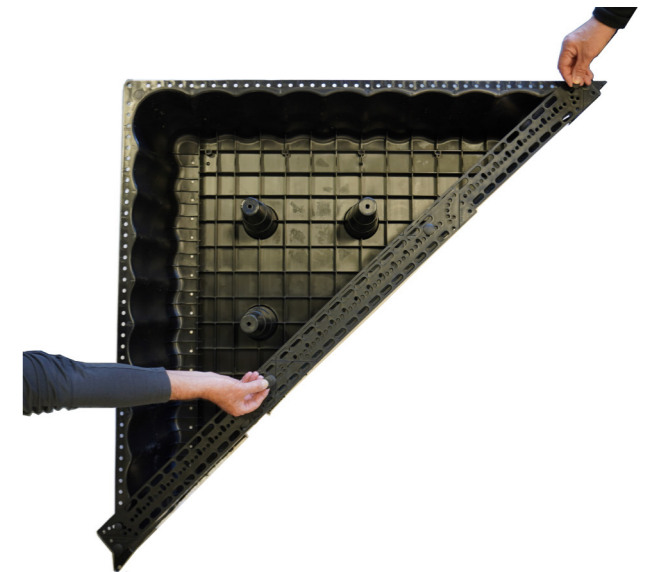

Place the CLEVA COMB™ across the exposed face of the CLEVA POD®, push the CLEVA COMB™ firmly down into the grid securing the CLEVA COMB™ teeth into the pods structural grid and connect into the pre-drilled base flange using the CLEVA PLUG™s.

