




Measure and mark the length of the POD that needs to be shortened.

HANDY TIP:
A white engineers crayon works very well here.

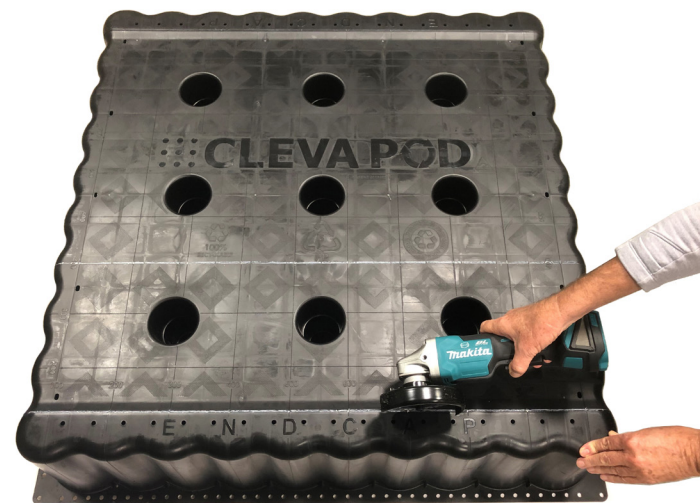

Cut the End Cap off following the pre-marked End Cap cut line and the section you wish to remove.



Drill 2-3 8mm holes into the CLEVA POD® through the predrilled holes in the End Cap and secure using the CLEVA PLUG™s. Connect the base flange at either end of the End Cap using a CLEVA PLUG™ from the underside of the base to avoid puncturing the membrane.