


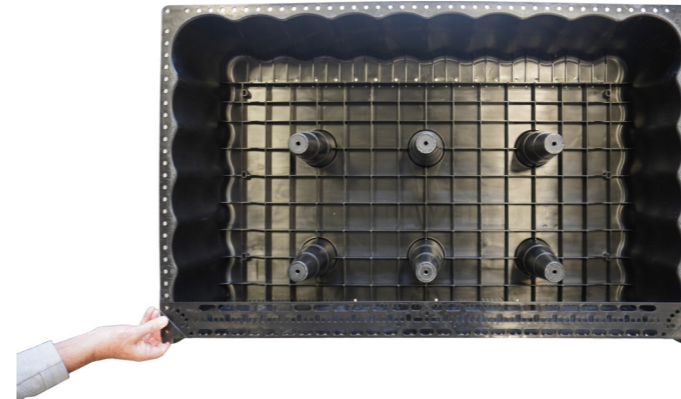


Measure and mark the length of the POD that needs to be shortened.



Cut the marked section out from the CLEVA POD®.



Place a CLEVA COMB™ across the exposed face of the CLEVA POD®, push the CLEVA COMB™ firmly down into the grid securing the CLEVA COMB™ teeth into the pods structural grid and connect to pre-drilled base flange using the CLEVA PLUG™s.

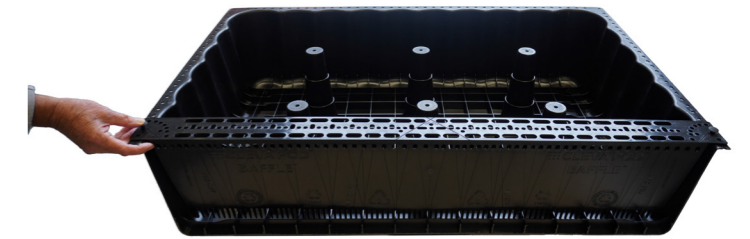

HANDY TIP:
Ensure the CLEVA COMB™ teeth are placed behind the last grid line to lock the CLEVA COMB™ into the grid.

HANDY TIP:
When securing the End Cap or CLEVA COMB™ always ensure the CLEVA PLUG™ flat head is on the underside of the CLEVA COMB™ to avoid the spike end of the plug puncturing the membrane.

